



Instructions for **replacing the battery** in Dual Cassette System (DCS) cameras

❶ The battery in this camera can provide power for approximately two rolls of film (assumes all are flash pictures). A weak battery will be evident when the flash charge time becomes unusually long.



❷ To replace battery, remove small rectangular cover on bottom of camera. You will need to slide cover towards rounded camera grip side and carefully pry the battery door cover open with a small flat head device such as a screwdriver. Remove old battery and recycle.



❸ Replace with a fresh AA alkaline battery. Make sure (-) side of battery (flat bottom end) is facing the rounded camera grip side.



❹ Replace battery door. Arrow on door should point towards the camera grip side. Put door pegs located by “CE” in first and then slide to right (flat side), causing the pegs on the left to also slide into position.